
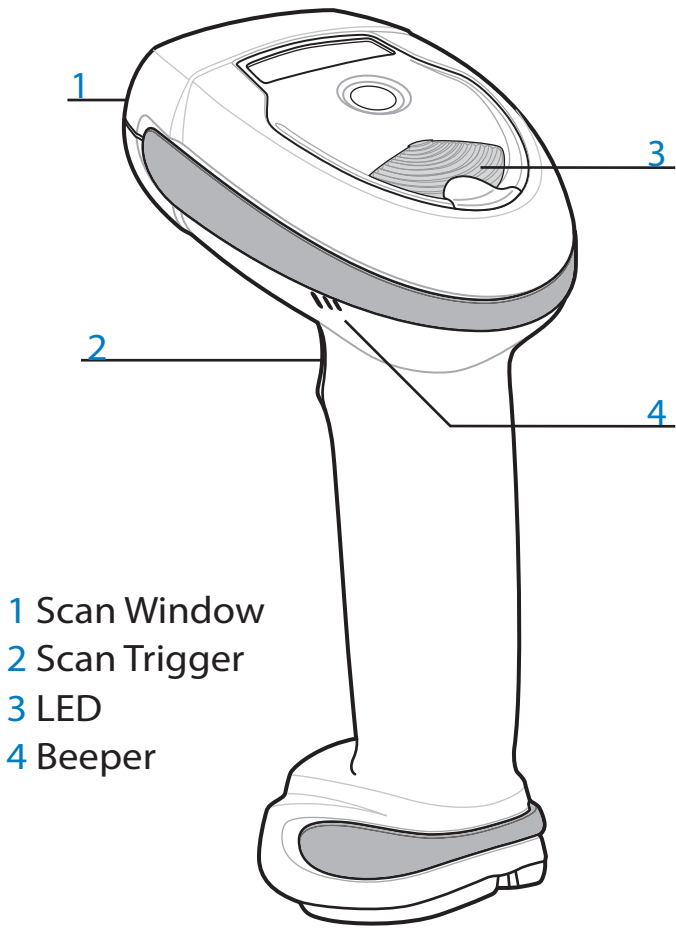


LI4278 LINEAR IMAGER  
QUICK START GUIDE


http://www.zebra.com/li4278  
POST IN WORK AREA

See Product Reference Guide for detailed information

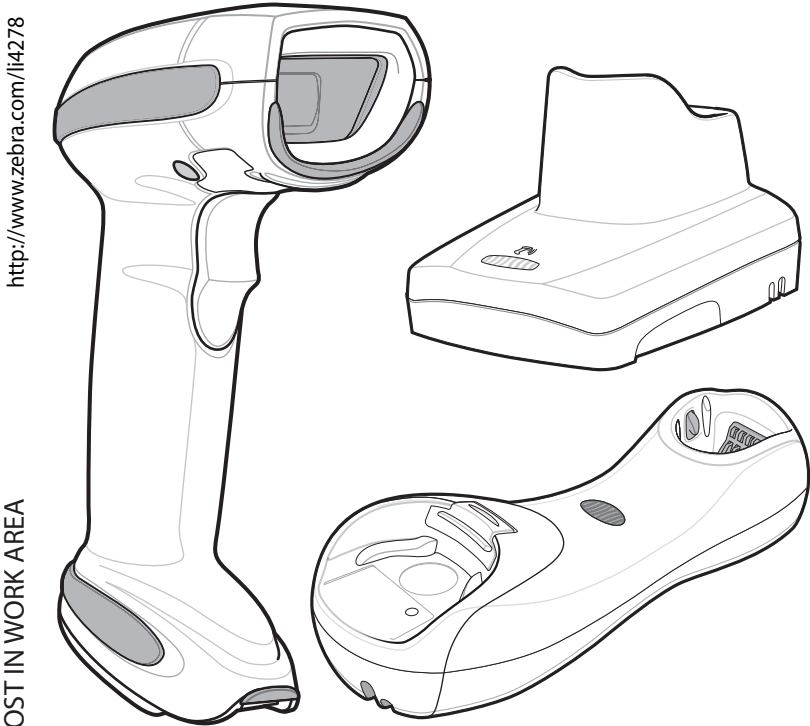


Cradles

NOTE: The scanner must be paired to the cradle prior to scanning in standard or presentation mode.

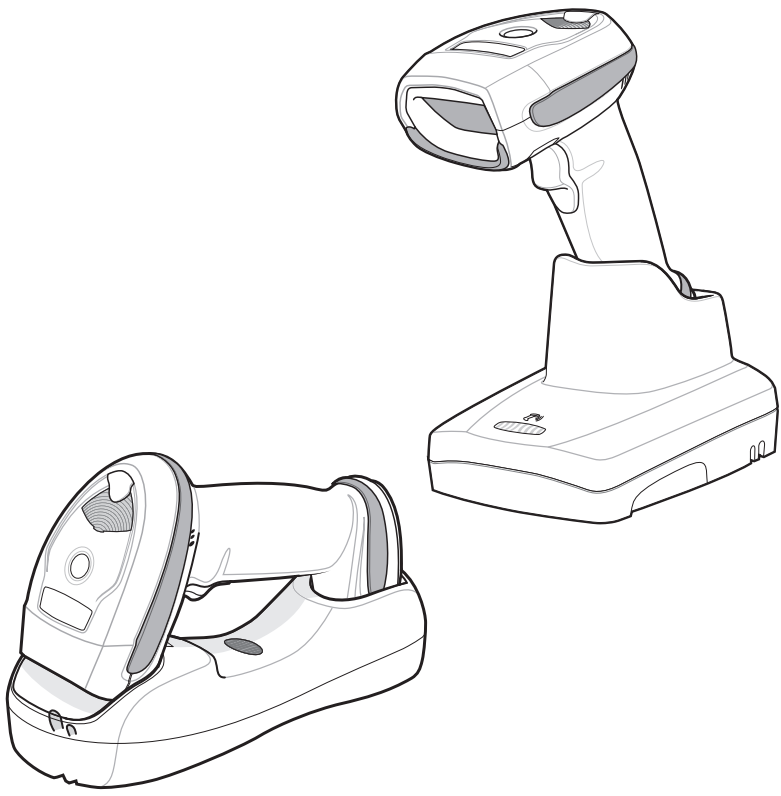

Refer to the LI4278 Product Reference Guide, or the cradle Quick Reference Guides for detailed information about cradle setup. When charging, use the cradle power supply for faster charge time.

STEP 1 - CRADLE CABLE CONNECTIONS

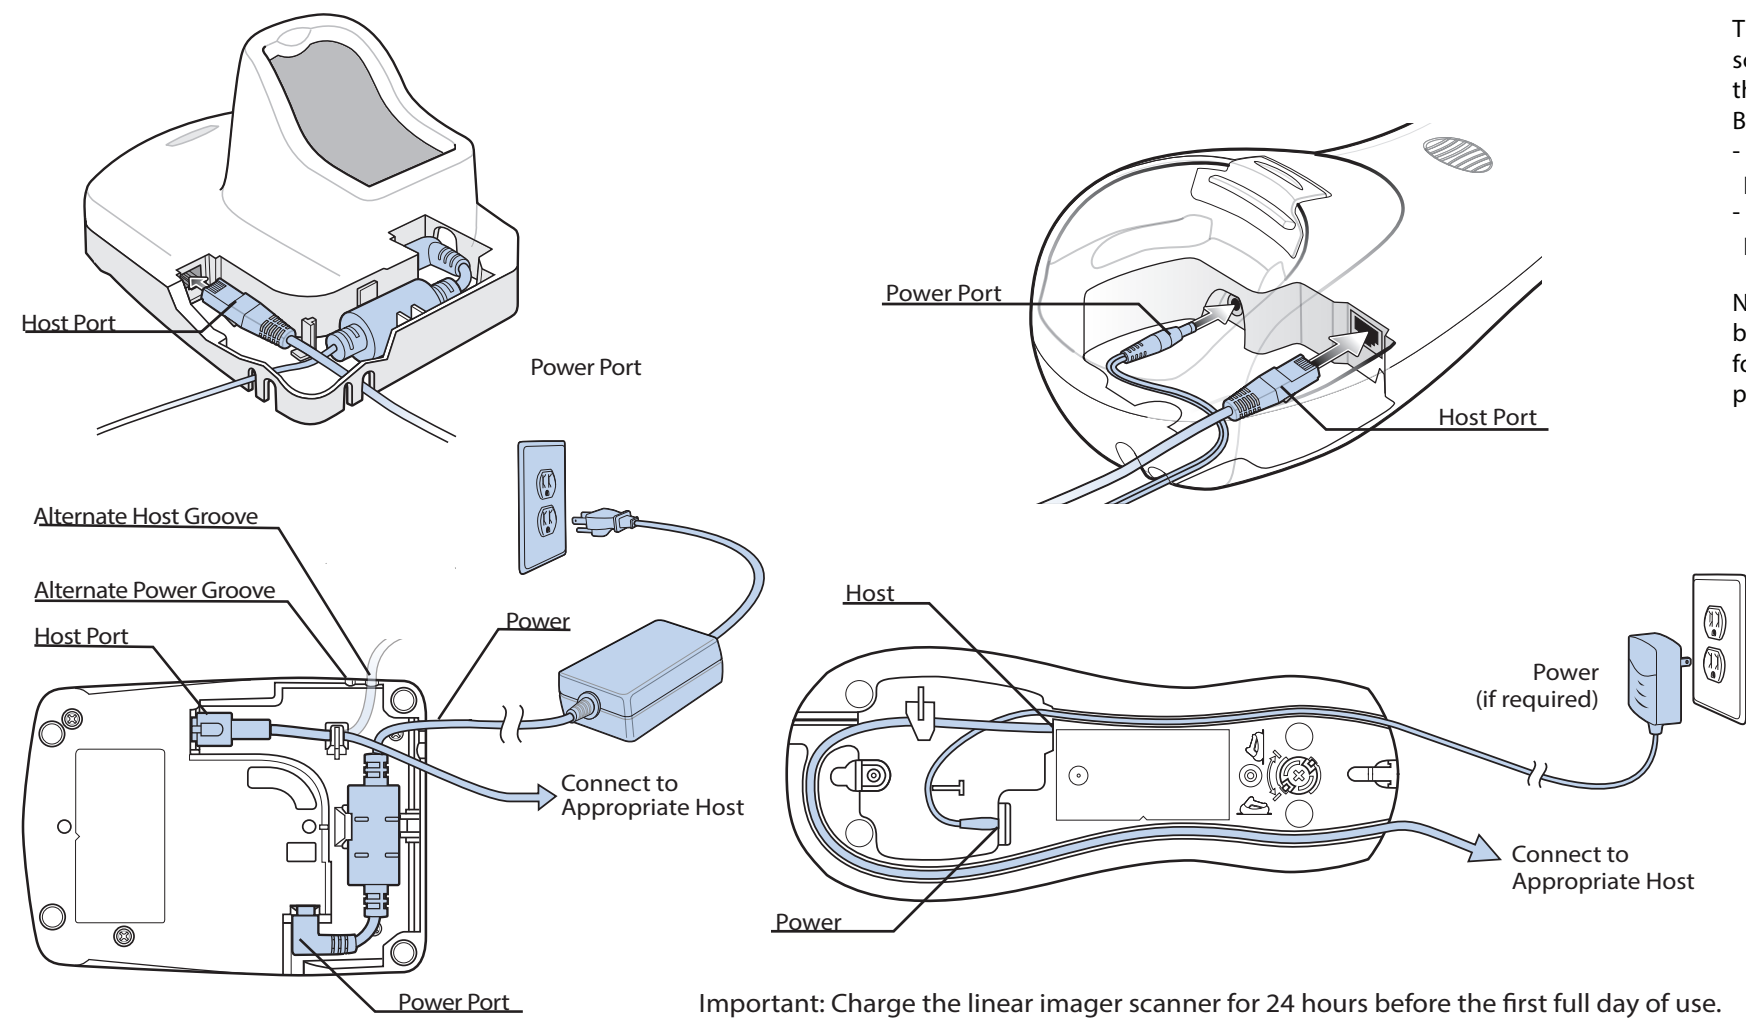


STEP 2 - PAIRING SCANNER TO CRADLE

There are two methods available to pair (marry) the scanner to the cradle: scan the pairing bar code or pair on contacts by inserting the scanner into the cradle. Each cradle type has its own default pairing method. When the Bluetooth connection beep sounds the scanner and cradle are connected.


- Presentation cradle default (pair on contacts): cradle and scanner are paired when the scanner is inserted into the cradle.
- Standard cradle default (scan pairing bar code): cradle and scanner are paired when the user scans the pairing bar code on the cradle.

Note: When pair on contacts is enabled you may still use the scan pairing bar code method. You can enable or disable the pair on contacts method for either cradle type by scanning the appropriate pairing method programming bar code from the LI4278 Product Reference Guide.

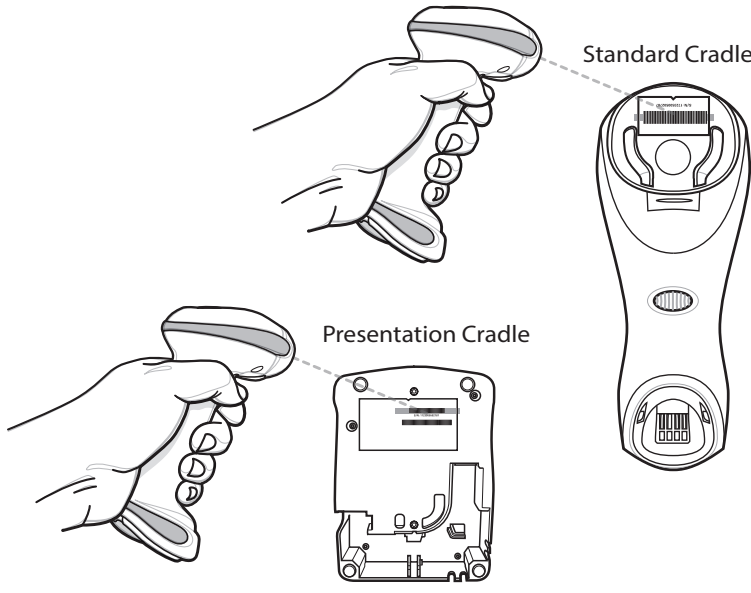

STEP 3 - CONNECT HOST INTERFACE

NOTE: Cables may vary depending on configuration

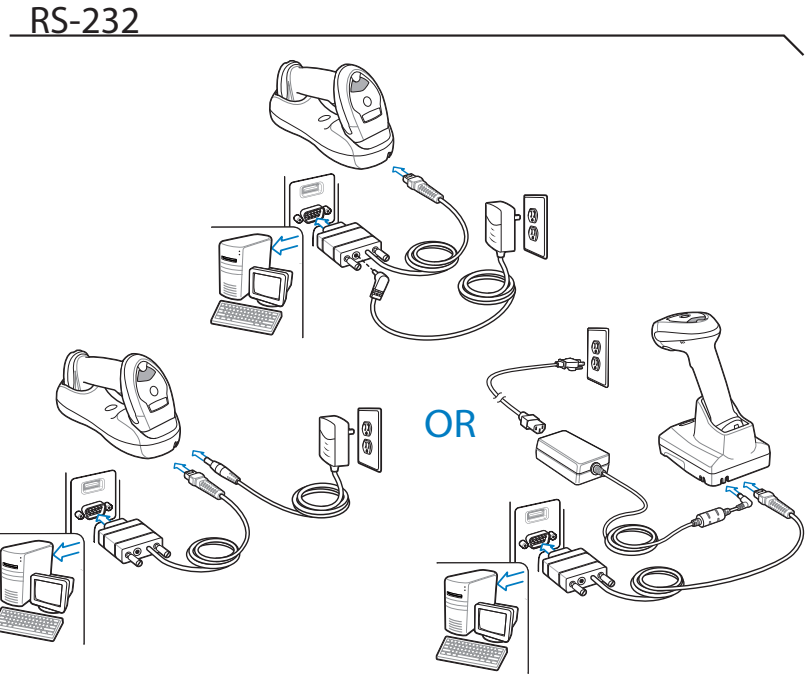


STEP 4 - SET UP INTERFACE (Scan Host Bar Codes)



STEP 5 - RADIO COMM HOST TYPES

Radio Communications Host Types

Scan a bar code below to choose how the scanner connects to a remote device. Scan CRADLE HOST if connecting to the CR0078 cradle. Refer to the Product Reference Guide for detailed information.

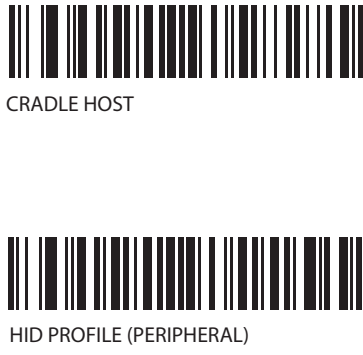

HID PROFILE (PERIPHERAL)



SERIAL PORT PROFILE (PERIPHERAL)




SERIAL PORT PROFILE (CENTRAL)

Unpairing/Disconnection



UNPAIR/DISCONNECT


USB

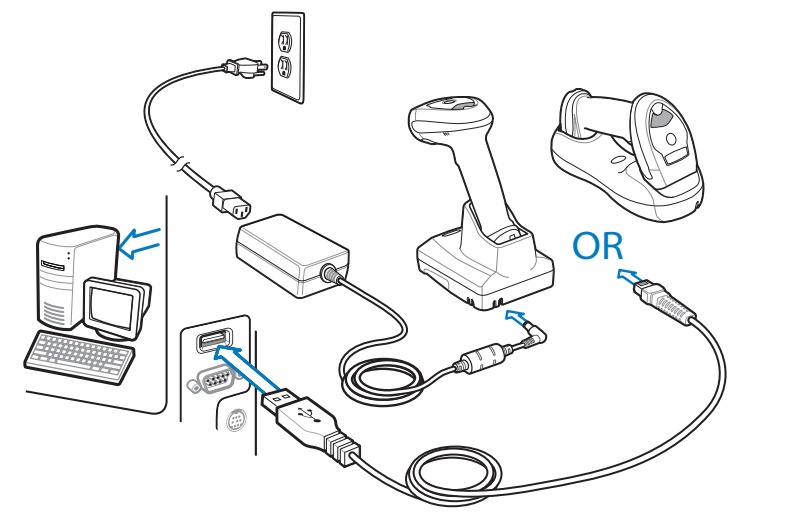


USB




IBM 46XX

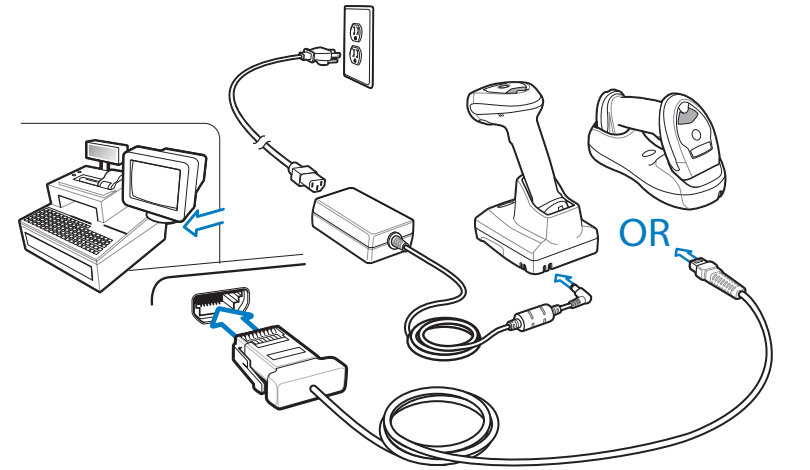


IBM 46XX

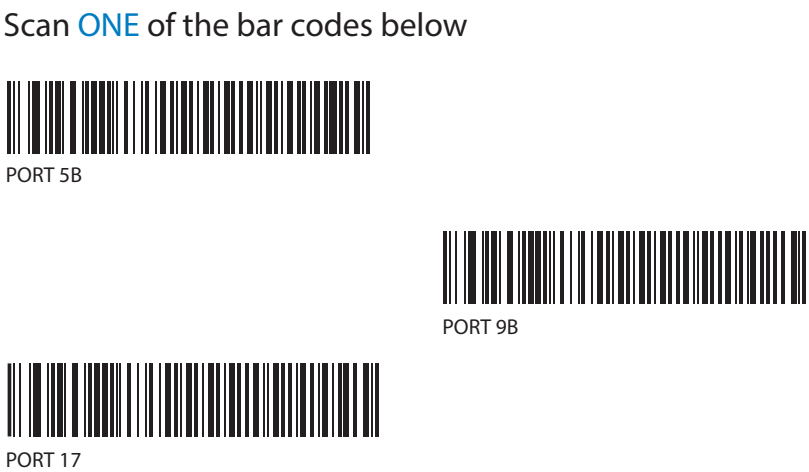

Keyboard Wedge

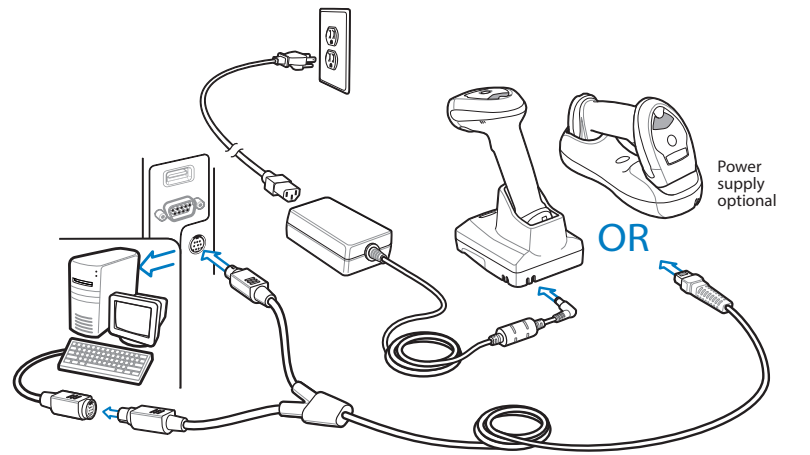

Keyboard Wedge

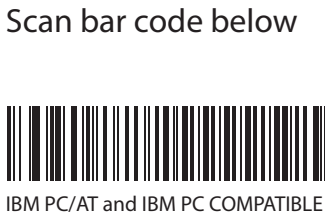

HELPFUL BAR CODES

SET DEFAULTS



RETURN TO FACTORY DEFAULTS

BATTERY OFF



BATTERY OFF FOR LONG TERM STORAGE/SHIPPING

123SCAN

123Scan is an easy-to-use , PC-based software tool that enables rapid and easy customized setup via a bar code or USB cable. For more information, visit: <http://www.zebra.com/123Scan>.



